 


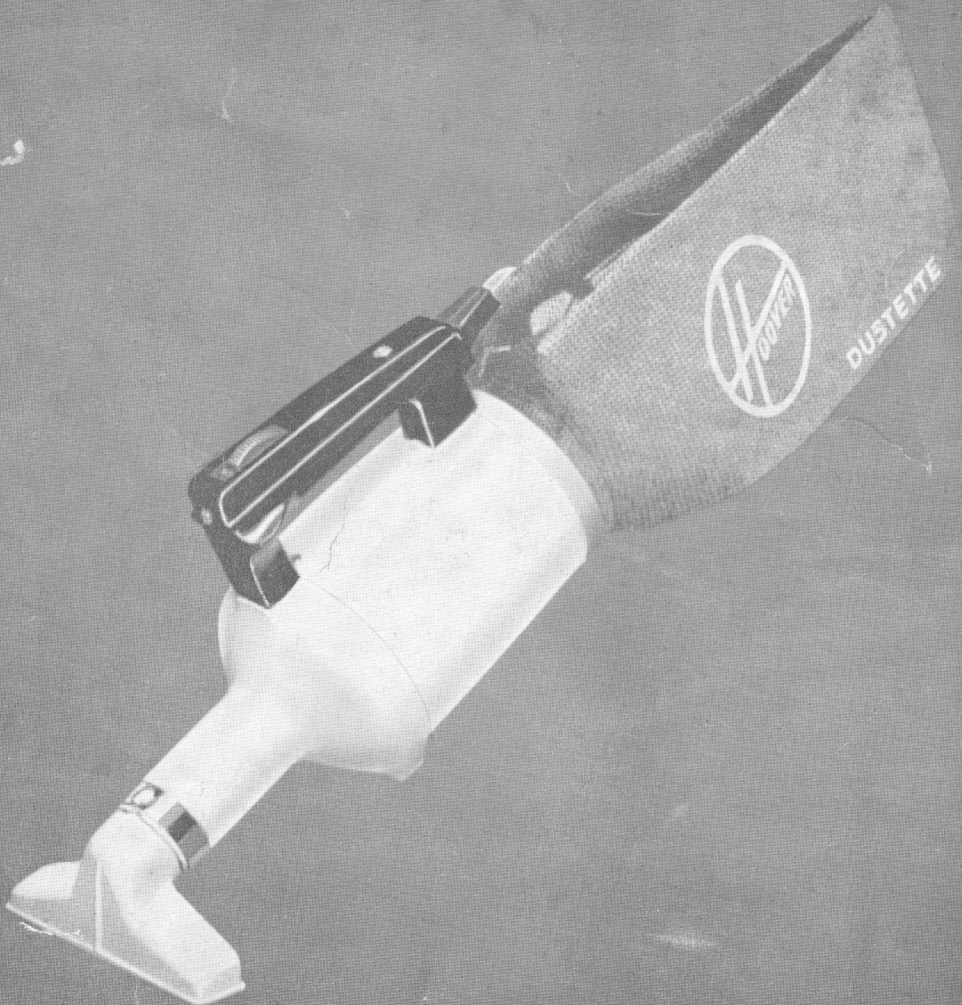

INSTRUCTIONS FOR THE USE AND CARE OF THE

DUSTETTE

MODEL 2614B



IMPORTANT

The Dustette operates on either alternating or direct current (A.C. or D.C.), but be sure that your electricity supply voltage is within the range marked on the cleaner nameplate which is situated underneath the cleaner nozzle.

Disconnect plug from electricity supply before making adjustments.

To assemble and use

To attach the bag, place the metal bag ring over the opening at the rear of the Dustette so that the top seam of the bag is slightly offset to the left of the handle. Press the ring firmly over the opening and turn it to the right until the bag ring locks in position. (Fig. 2.)

To empty the bag

To remove the bag from the Dustette turn the metal bag ring to the left until it is free. You can then easily dispose of the dirt.

It is advisable to empty the bag regularly, otherwise an accumulation of dirt will reduce the efficiency of the cleaner.

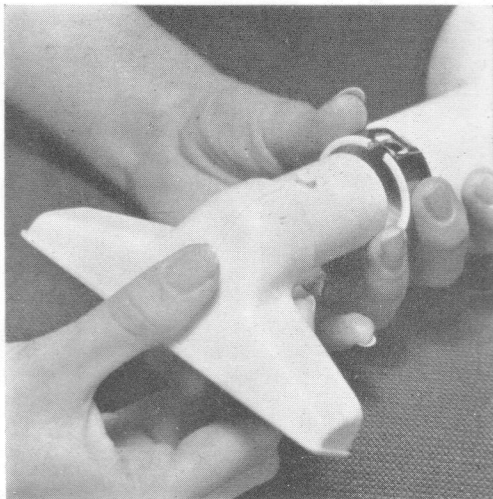


Fig. 1

To remove the nozzle, press the sides of the spring clip together and pull the nozzle forward. (Fig. 1.)


To store your Dustette

The Dustette should be kept in a cool, dry place away from radiators and damp atmosphere.

Service

Should service be required, please contact your nearest Authorised Hoover Service Retailer.

Fig. 2

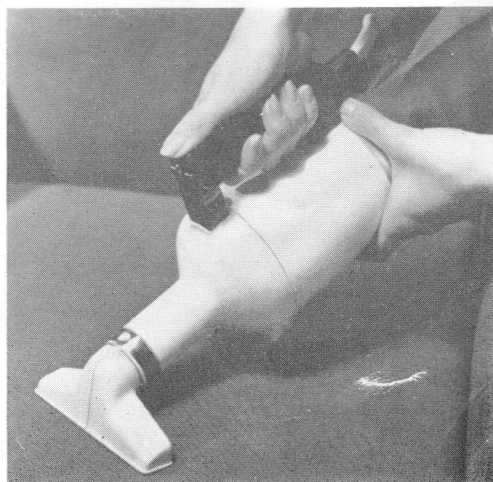

CLEANING TOOLS AVAILABLE AS AN OPTIONAL EXTRA

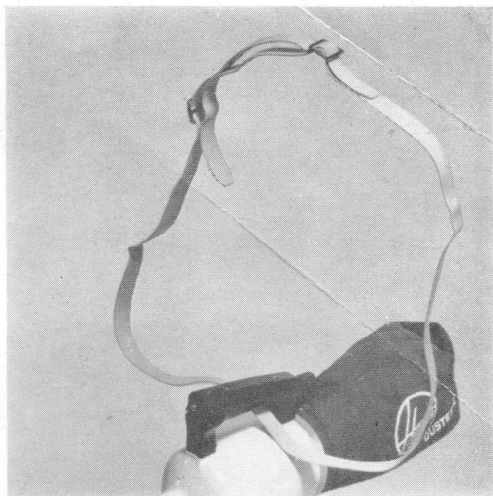


Fig. 4

A set of cleaning tools is available as an optional extra. This greatly extends the range of whole-house cleaning and usefulness of your Dustette.

Assemble as in Fig. 3.

Simply line up the stud on the tool with the latch and push together. To separate, press the centre of the latch spring and pull apart.

Note

These tools are also used for another Hoover model. It is therefore necessary to make a simple adjustment to the carrying strap before use.

Release the buckle and discard the two spring clips which are not required. (Fig. 4.)

For convenience, the strap supports the cleaner over the shoulder. The end should be passed through the slot in the handle and buckled as shown.


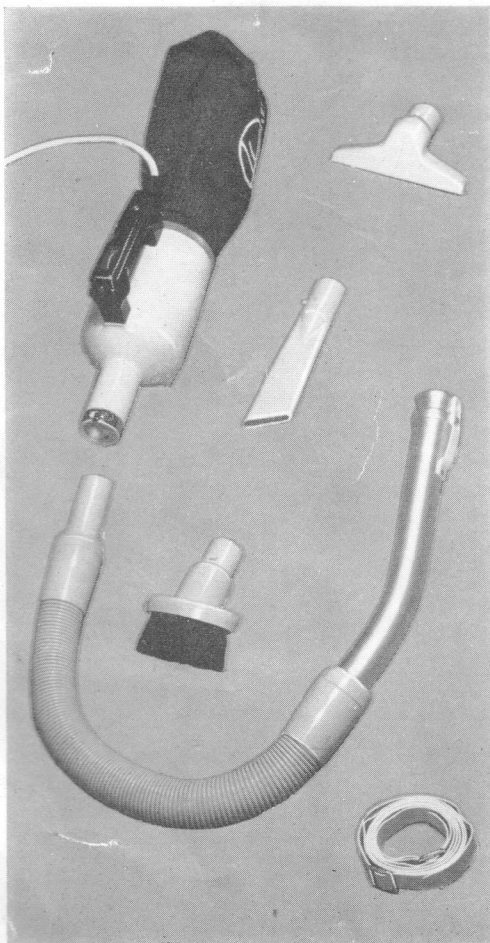


Fig. 3

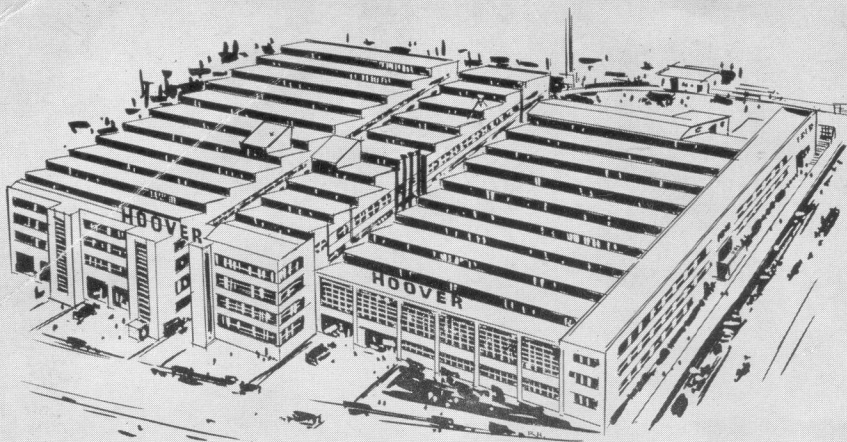

Guarantee

To mark our confidence in the Hoover Dustette Cleaner, which has been fully tested, inspected and adjusted, it is guaranteed for a period of one year against mechanical and electrical defects in the case of domestic users and for 90 days in the case of commercial users. Brushes are not subject to this guarantee, since their length of life depends upon usage. Any part judged defective by the Company will be exchanged for a replacement part; transportation costs involved in the repair of the appliance or the replacement of the defective part, shall be borne by the claimant.

A Hoover Product, when properly used and cared for, will render years of excellent service and, therefore, each purchaser should carefully read the Instruction Book, as misuse or failure to follow instructions make the guarantee void. It also becomes void if the product is used on the electric voltages other than that shown on the rating plate.

Hoover (Australia) Pty. Limited is unable to accept responsibility under this guarantee for damage from repair work carried out by other than authorised Hoover service retailers or agents, or from the use of other than genuine Hoover parts. In the event of service or advice being needed, please communicate with your local Hoover retailer.

This guarantee is void unless record is received of name of purchaser and date of purchase within 14 days.

To ensure that your cleaner is covered by this guarantee, it is essential that you immediately fill in and return the guarantee card, which you will find enclosed in the carton.

The word Hoover, circular emblem and Dustette are trade marks of Hoover Limited.

HOOVER (AUSTRALIA) PTY. LTD.

Cnr. Rothesay Avenue and Belmore Street, Meadowbank, N.S.W.