



GUARANTEE

To mark our confidence in your new Hoover product which has been fully tested and inspected, it is guaranteed for a period of one year from the date of purchase or hire purchase against mechanical and electrical defects. Any defective part will be repaired or exchanged - free of any charge to the purchaser. Brushes, pads and disposal bags are not replaced free within this period as their length of life depends upon the amount of use and care given.

A Hoover product when properly used and cared for will render years of excellent service and, therefore, each purchaser should carefully read the instructions as misuse or failure to follow the instructions makes the guarantee void. It also becomes void if the product is used on an electric voltage other than that shown on the nameplate.

Hoover Limited are unable to accept responsibility under this guarantee for damage from repair work carried out with other than genuine Hoover parts, or by any person other than an authorised Hoover Service Dealer.

In the event of advice being needed, please communicate with the nearest Hoover Dealer.

Please retain your receipt as proof of date of purchase

Associate Companies in Australia, Austria, Belgium, Brazil, Colombia, Denmark, Finland, France, Germany, Holland, Italy, Mexico, New Zealand, Norway, Rhodesia, South Africa, Sweden, Switzerland, Uruguay

Represented in all the principal countries of the world


The Trade Mark "Hoover" is protected by registrations in Great Britain and other countries

Hoover policy is one of continuous improvement and accordingly we reserve the right to change specifications without prior notice

HOOVER LIMITED PERIVALE GREENFORD MIDDLESEX



Hooverette model 2944B

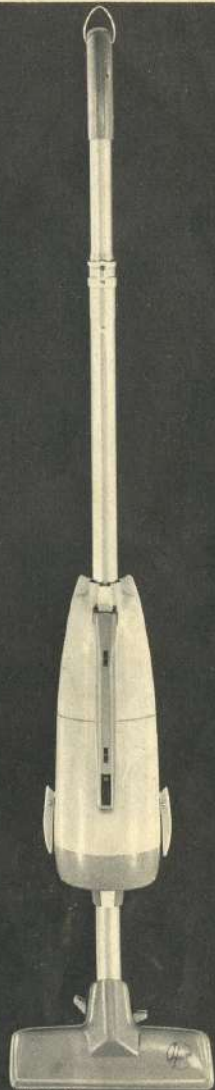

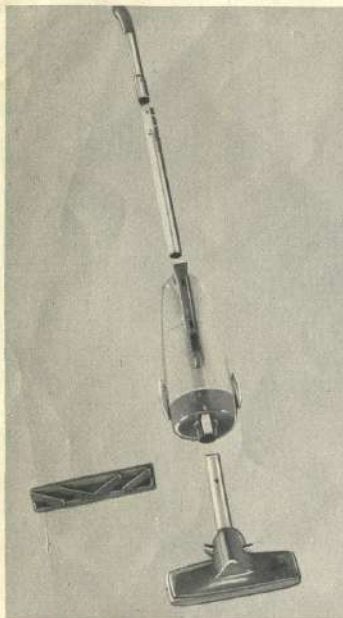


Fig. 1



Fig. 2



Fig. 3

Important

The Hooverette operates on either Alternating or Direct Current (AC or DC) but be sure that your electricity supply voltage is within the range marked on the nameplate which is situated on the underside of the cleaner. This equipment is double-insulated and should not be earthed when used in domestic premises.

If a B.S. 1363 (13 Amp) fused plug is used it should be fitted with a 5 Amp fuse (for voltages between 200-250 v.). Disconnect the plug from the electricity supply before making adjustments.

To assemble the cleaner

Fit the carpet and floor nozzle (Fig. 1) into the end of the cleaner furthest away from the handle. Fit the handle grip section into the extension tube and attach to the rear end of the cleaner.

To detach, press on the latch and pull apart (Figs. 2 and 3).

For cleaning carpets and floors

Assembled as Fig. 1 the Hooverette can be used on both carpets and floors.

The carpet and floor nozzle is used normally with the brush in the 'Floating' position (lever marked 1 pushed fully down).

To remove clinging threads and litter from the carpet, tilt back the nozzle by lowering the handle.

To remove stubborn dirt from hard surfaces the brush can be locked by pushing down the lever marked 2 (Fig. 4).

For dusting polished floors

A buffing pad is provided for dusting and brightening polished floors. Clip the buffing pad on to the carpet and floor nozzle by placing the spring clips over the plastic rollers and pressing firmly together (Fig. 5).



Fig. 4



Fig. 5



Fig. 6



Fig. 7

Fig. 8

Storing the cleaner

Store the flex around the body of the cleaner (Fig. 8). A hook is provided at the end of the handle grip section to enable the cleaner to be hung in a cupboard.



To empty and replace the bag

It is important that the bag should be emptied frequently. Regular fitting of a new bag will ensure maximum cleaning efficiency.

To fit new Disposall bag

Stand cleaner on its rear end and release two side catches. Lift off front cover and remove paper disposall bag (Fig. 6). Fit new bag, ensuring that the top is folded back over the edge of the cloth bag. Further supplies are available from your Hoover dealer.

To empty bag without renewing paper Disposall bag

Stand cleaner on its rear end and release two side catches. Lift off front cover. Remove whole bag assembly, empty and replace (Fig. 7).

How to maintain cleaning efficiency

If the cleaner does not pick up satisfactorily check these points before calling for service :-

- 1 Does the disposall bag need emptying or replacing ?
- 2 Is brush worn or nozzle clogged ?
- 3 Ensure that your electrical supply fuses have not blown.

Service

Should service be required please contact your nearest authorised Hoover dealer.